 


Label Printer
标签打印机

使用指南
USER'S GUIDE

使用前请详细阅读本《使用指南》，并妥善保存以便必要时随时查阅。
Please read this carefully before using the printer and keep the manual in a handy place for future reference.

确认包装清单
Confirm the packing list

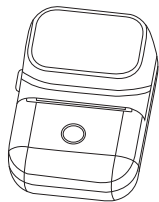

使用指南、保修卡
User's guide, warranty card



 
USB 数据线
USB cable

注意
CAUTION



注意
Caution

充电中请勿取出电池，
充电中能正常打印。
Do not take out the battery during
charging. It can print properly
while charging.

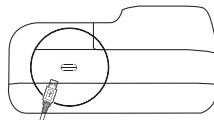

USB / 电源接口
USB/Power interface

打印纸卷安装
Install rolls



打印机使用最大直径50mm，最大规格57mm×50mm

Label Printer uses the paper roll with a maximum diameter of 50mm and a maximum size of 57mm×50mm.



注意
Caution

首先请确定您使用的标签为专用标签纸。确保纸轴调整到合适的宽度。装好标签
纸后盖好纸仓盖。

First, make sure that the paper roll you are using is a special paper roll for this
model. Make sure the paper roll is adjusted to the proper width,
Cover the label cover after loading the thermal paper.

打印机部件说明
Description of printer parts

正面
Front View

 
标签仓盖开关
Label cover switch

标签仓盖
Label Cover

出纸口
Label exit slot


电源键
Power Key

侧面
Lateral View



USB / 电源接口
USB/ Power interface

 指示灯显示说明
Indicator display description



绿色指示常亮：表示打印机当前在开机状态
Green Light Always On: It means the printer is on.

绿色指示闪烁：表示当前打印机缺纸，需更换耗材
Green Light Flash: It means paper shortage, need to refill paper.

红色指示常亮：表示当前正在充电中
Red Light Always On: It means it is charging.

红色指示灯常亮后变绿灯：表示当前电量已充满
Red Light Always On and turn into Green Light: Printer is fully charged.

基本使用功能
Basic Function

开机 Start your printer
持续按住打印机电源键2秒，打印机开机。
Press the power key of the printer for 2 seconds, and the printer will start up.

关机 Printer shut off
开机状态中持续按住电源键2秒，打印机关机。
Press the power key of the printer for 2 seconds when it's started up and the printer will shut off.

走纸 FEED
单击电源键：走一张纸
Press the FEED key: Output a section of paper

标定 Calibrate
双击电源键：打印机走纸，自动标定标签纸
Double click the power button: the printer runs paper and automatically calibrates the label paper

关机模式 Shutdown mode
当打印机处于等待状态一定时间后，自动关机。
Automatic shutdown when the printer is in standby state

打印机参数
Printer parameters

打印参数 Printer parameters			
打印方式 Printing method	行式热敏打印 thermal line printing		
分辨率 Resolution	203dpi(8dots/mm)		
打印速度 Print speed	MAX : 50mm/s		
打印宽度 Print span	MAX : 48mm		
通讯接口 Communication interface	USB、蓝牙	USB, Bluetooth	
省电模式 Power saving mode			
休眠 Sleep mode	支持	Available	
存储 Storage			
R A M	RAM	20K	
F l a s h	Flash	128K	
条码 Bar code			
1	D	CODE39 CODE128, CODE93, EAN-13	
2	D	QRcode	
检测功能 Inspection function			
传感器 Transducer	缺纸侦测, 黑标侦测, 电压侦测, TPH温度侦测, 标签侦测 Lack of paper detection, black label detection, voltage detection, TPH temperature detection, label detection		
充电 Charging			
电 池 Battery	1000mAh/7.4V可充电锂电池 Rechargeable lithium battery		
物理特性 Physical characteristics			
操作条件 Operating conditions	-10℃ — 52℃, 10%RH — 85%RH		
存储条件 Storage condition	-20℃ — 70℃, 5%RH — 90%RH		
外观尺寸 Dimensions	122mmx90mmx62mm		
重 量 Weight	约300g About 300g		
纸张 Paper			
纸张类型 Paper Type	热敏纸或标签纸 Thermal paper or label paper		
纸张宽度 Paper width	MAX:57mm×50mm(宽×直径) (Width×Diameter)		

由于产品升级，而发生的性能参数变化。本公司有权更改，恕不另行通知。
The company reserves the right to change the performance parameters due to product upgrade without prior notice.

(打印机) 保修证
(Printer) Warranty Card

此保修证只适用于中国大陆地区（不包括香港和澳门特别行政区）
This warranty card only in China mainland(Excluding Hong Kong&Macau)

一、保修条款 Guarantee Clause

1、保修有效期内如用户在正常使用情况下发生故障，请携带本保修证和购货发票前往指定的维修站，按本证规定进行免费修理（包括零部件更换和人工费），但不负担修理品的上门费、运送货、安装及拆卸等与实际修理无关的费用。
1. If the customer in the case of normal use printer and the printer fails in the period of warranty validity, please bring the warranty card and purchase invoices to specify pit, free maintenance in accordance with the provisions of this license (including replacement parts and labor), but not burden of repair goods door to door fee, shipping fee, installation and dismantling to etc. Has nothing to do with the actual repair cost.

2、以下情况即使在保修有效期内概不提供免费修理
2. The following cases do not provide free repair even within the warranty period.

(1) 无法同时出示购货发票和本保修证（购买产品时须完整填写用户信息并加盖销售商店印章）；
The purchase invoice and this warranty certificate cannot be presented at the same time (when purchasing products, the user of the model and production number of the goods have been altered, torn or unrecognizable.

(2) 商品的型号和生产编号被涂改，撕毁或无法辨认；
The model and production number of the goods have been altered, torn or unrecognizable.

(3) 在本公司指定维修站以外及使用非本公司零件进行修理或改装引起的故障或损坏；
Failure or damage caused by repair or modification outside our designated service stations and not using our parts.

(4) 由于火灾、地震、水灾、风灾、雷击等自然灾害及异常电压、公害、化学物质的侵蚀而造成的故障和损坏；
Due to fire, earthquake, flood, wind, lightning and other natural disasters and the fault and damage caused by abnormal voltage and chemical erosion.

(5) 恶劣条件（有眼、灰尘、受潮、直射阳光等）下使用，或未按使用说明书的要求使用、维护而造成的故障和损坏；
Failure and damage caused by severe conditions (dust, damp, direct sunlight, etc.) or failure to comply with the requirements of the instruction manual (use and maintenance).

(6) 由于感染病毒、跌落、移动、运输、异物进入或非本公司所制造的产品等原因引起的故障和损坏；
Malfunction and damage caused by virus infection, falling, moving, transportation, foreign matter entering or products not manufactured by our company.

(7) 由于正常磨损引起的周期性检查、维护、维修或周期性更换零部件；
Periodic inspection, maintenance, repair or periodic replacement of parts caused by normal wear

(8) 外壳、面板、按键等外观零件和驱动软件、电源线及附属数据连接线等附件以及耗用材料的更换；
The replacement of exterior parts such as shell, panel and button, as well as drive software, power cord and attached data connector, and consumable materials (such as paper roll and cutter).

(9) 使用非本公司指定的正品耗材或本产品不支持的打印介质引起的质量问题。
Quality problems caused by using consumables not designated by our company or caused by unsupported print media.

二、保修有效期：自购机之日起一年（以正式购货发票为准）
Warranty period: one year from the date of purchase (subject to the official purchase invoice).

三、本保修凭证只作为符合本证所列期限条件下用户享受保修的凭证，因而不限制用户在法律上的权利。
This warranty certificate shall only be regarded as the certificate for the user to enjoy the warranty under the term specified in this certificate and shall not limit the legal rights of the user.
本证随机一次发行，遗失不补，请连同购货发票（或发票的复印件）妥善保存。
This certificate is issued at random. Please keep it with the purchase invoice (or a copy of the invoice).

保修卡
Warranty Card

产地: Production Place:		型号: Model:
生产编号: Production number:		
用户 Customer	名称: Name:	电话: Tel:
	地址: Address:	邮编: Postcode:

注：以上内容涂改无效。修理票号应与修理单据号码一致，维修记录以修理单据内容为准。
请妥善保管修理单据，以备查验。

Notice:
The above contents shall be invalid if altered. The repair ticket number shall be consistent with the repair receipt number. The repair record shall be subject to the content of the repair receipt. Please keep the repair bill for inspection.